

BLINDS ONLINE

ROLLER BLIND INSTALLATION INSTRUCTIONS

What you will need


- 1) Drill and drill bit (6mm recommended)
- 2) 6mm nail in anchors (supplied)
- 3) Screwdriver
- 4) Pencil
- 5) Screws and Brackets (supplied)

Installation Instructions


STEP 1: Select the mounting method you specified when ordering your blinds (Recess or Face-Fix).

(The brackets represented below are only a representation of the brackets you may receive. Your actual brackets may vary slightly however the installation procedure remains the same)

Face mounting to the wall or window frame

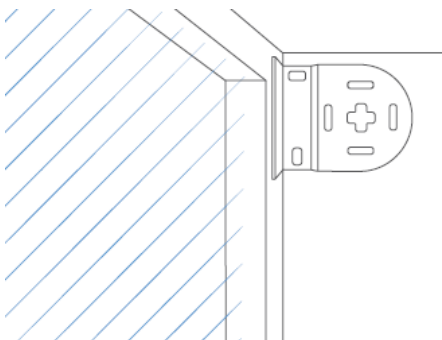

Recess mounting to the ceiling or window lintel

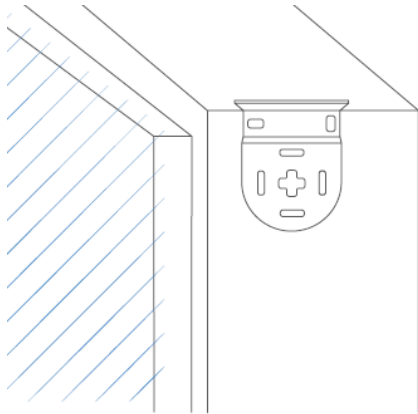

STEP 2: Drill pilot holes where you marked the screw holes for the control side bracket (this is the bracket pictured in STEP 1 above). Insert plugs provided into the drilled holes. Use a screwdriver to attach the brackets to the wall or roof using the screws provided.

STEP 3: After the control bracket is mounted, attach/place the physical blind to the control bracket. While holding the blind carefully position the non-control side bracket (this is the bracket with the single hole) using the blind as a spacer and mark the points/position of this bracket. Remove the physical blind from the window.

STEP 4: Drill pilot holes where you marked the screw holes for the non-control side bracket. Insert plugs provided into the drilled holes. Use a screwdriver to attach the brackets to the wall or roof using the screws provided.

STEP 5: Clip the non-control side of the blind into the bracket (the non-control mechanism is spring loaded), then insert the control side of the blind into the control side bracket.

Well done! You have installed your new blinds